

DVR FEATURES



CABLE: Press to control your cable channel setting

CH: Allows you to move up and down through your programming channels

DVD/VCR: Press to control your DVD or VCR player

EXIT: Allows you to exit an on-screen menu to return to regular program viewing

FAV: Allows you to establish a favorite channel listing

FFWD: Fast forward through paused or previously recorded programs

GUIDE: Displays the interactive programming guide

INFO: Provides detailed program information, including actors, filming dates, etc.

INPUT: Allows you to choose various video sources

LAST: Returns to the previously viewed channel

LIST: Displays a list of recorded programs, and allows you to select one for viewing

LIVE TV: Instantly returns you to live TV viewing from pause or rewind modes

MENU: Gives you access to on-screen displays and set-up options

PAGE: Allows you to scroll up and down through menu screens and the guide

PAUSE: Freezes the current program for up to one hour

PLAY: Starts the live or recorded program after it has been paused or stopped

PPV: Provides access to Pay-Per-View guide and purchase screens

RECORD: Allows you to record a program of your choice for later viewing

REPLAY: Replay the last few seconds of live TV or a previously recorded program

REW: Rewind live TV or a previously recorded program

STOP: Ends the recording of a live program, or stops play of a recorded program

TV: Press to control your TV settings

VOL: Allows you to increase or lower the audio volume for your program

Recording Future Programs:

1. Press GUIDE on your remote to view the on-screen cable television guide.
2. Using the ARROW keys, highlight the future program which you would like to record, and press OK.
3. Using the ARROW keys, highlight SET OR CANCEL A RECORDING (red dot), press OK.
4. Use the ARROW keys to highlight "RECORD THIS PROGRAM," press OK.
5. Press OK to confirm.

Recording Future Program Series:

1. Press GUIDE on your remote to view the on-screen cable television guide.
2. Using the ARROW keys, highlight the future program which you would like to record, and press OK.
3. Using the ARROW keys, highlight SET OR CANCEL A RECORDING (red dot), press OK.
4. Use the ARROW keys to highlight "CREATE A SERIES RECORDING," press OK.
5. Use the ARROW keys to choose the desired options in the series recording set-up window.
6. Use the ARROW keys to highlight "RECORD SERIES WITH THESE SETTINGS," press OK.



SKT Customer Care, 112 S. Lee, Clearwater, KS 67026
Monday - Friday 7:30 a.m. to 5:30 p.m.
620.584.2255 / 888.758.8976
www.SKTMainstreet.com



October 8, 2008

DVR Remote Guide

Motorola DRC800